2018+ Mustang GT/Bullitt High Output Intercooled System Installation Guide





The **ULTIMATE** Power Adder™

Accessible Technologies, Inc. 14801 W. 114th Terrace Lenexa, KS 66215 Phone: 913.338.2886 Fax: 913.338.2879

techserv@procharger.com

All rights reserved. Accessible Technologies Inc. hereby grants permission to use and reproduce this document for personal use, provided that all copyright information be retained. Reproduction of this document for unauthorized commercial use is strictly prohibited.

Information in this document is subject to change without notice.

ProCharger is a registered trademark and The Intercooled Supercharging Experts! TM and Designed to Blow Away the Competition TM are trademarks of Accessible Technologies, Inc. and may not be used without express permission.

You should also have the following gauges available to properly check the finished installation and monitor your vehicle's performance (especially for testing):

Manifold Boost Pressure Gauge
 Fuel Pressure Gauge

• Wide Band Oxygen Sensor and Gauge

Gauges should be of a type that can be read from the cockpit while performing a wide-open throttle road test. Cockpit or hood-mounted gauges are preferable. In order to obtain usable readings, the gauges should measure pressure at the intake manifold and fuel rail. IF VEHICLE DOES NOT MAINTAIN PROPER FUEL PRESSURE (50-65 PSI), DECREASE THROTTLE APPLICATION IMMEDIATELY. In some cases, extra vehicle modifications can strain the stock fuel pump. If your vehicle has difficulty retaining adequate fuel pressure, contact ATI ProCharger about the availability of an upgraded fuel system.

The engine on which the ProCharger® is to be installed should retain the factory compression ratio. If it has been modified in any way, please consult ProCharger staff before proceeding with the installation. This supercharger system is intended for use on STOCK, strong, well-maintained engines/transmissions. Installation on a worn or troublesome powertrain should be reconsidered. ATI PROCHARGER WILL NOT BE HELD RESPONSIBLE FOR DAMAGE TO A VEHICLE'S POWERTRAIN. ATI ProCharger is not responsible for ECM tuning/programming on non-stock vehicles. ATI PROCHARGER recommends verifying that your vehicle has current ECM updates from the vehicle manufacturer before installation.

For best performance and reliability, always use premium grade fuel (91 octane or higher) and listen closely for signs of detonation, which might sound like ball bearings rolling around in a tin can. IF DETONATION SHOULD OCCUR, OR IF YOU ARE UNSURE WHETHER WHAT YOU'RE HEARING IS DETONATION, DECREASE THROTTLE APPLICATION IMMEDIATELY and please consult ATI ProCharger staff. Detonation should not be an issue with a properly installed intercooled supercharger system, though OEM factory-shipped engine and parts inconsistencies are possible on any vehicle.

INTRODUCTION

Congratulations on purchasing your ProCharger® 2018+ Mustang GT/Bullitt High Output Intercooled System. Read this entire manual before you attempt to install your ProCharger kit. It is imperative that you follow all of the instructions in the order they appear in this installation guide. If you have any questions regarding any aspect of this installation, call us at (913) 338-2886.

For best results, we recommend reviewing the installation instructions beforehand, and following the installation instructions closely and in sequence. A detailed packing list has been provided to assist you in identifying the components of your ProCharger system.



Warning: Read and understand all safety precautions in this manual before installation. Failure to comply with instructions in this manual could result in personal injury, property damage, and/or voiding your warranty.



Warning: Your supercharged Mustang must always be run on 91 octane or better gas. The best way to insure this is to run the tank near empty (below 1/4) and fill with 91 octane for several tanks prior to installing the supercharger.

Required Tools and Supplies

- 3/4" Socket Set (standard & metric)
- Torx set
- Open End Wrench Set (standard & metric)
- 5/16" Nut Driver
- Hex Bit Set (allen) (standard & metric)
- Flat Screwdrivers
- Phillips Screwdrivers
- Plier Set
- Die Grinder
- Ford Engine Coolant (Pink)



Tech Tip: Installing spark plugs that are one heat ranger colder than stock and gapping your plugs to .035" is recommended.

TABLE OF CONTENTS

Introduction	i
Table of Contents	i
Getting Familiar	1
Air Inlet Removal	2
Fascia Removal	5
Cooling System	9
ProCharger Bracket and Head Unit	10
Intercooler & Tubing	15
Surge System	24
Air Inlet and PCV System	27
Finishing Up	30
Operation and Maintenance	32
Limited Warranty	34
ProCharger Extended Coverage	35

TUNING IS REQUIRED WHEN INSTALLING YOUR PROCHARGER SYSTEM. SEE SUPPLEMENTAL TUNING GUIDE FOR INSTRUCTIONS.

GETTING FAMILIAR



Completion of this section will configure the vehicle for system installation:

- (A) Engine Cover
- (B) Factory Air Inlet
- (C) Radiator Cover
- (D) Mass Air Flow (MAF) Sensor



Read and understand all safety precautions in this manual before installation. Failure to comply with instructions in this manual could result in personal injury, property damage, and/or voiding your warranty.

AIR INLET REMOVAL

Models Equipped With a Strut Tower Bar:

1 Use an 8mm to remove the screw holding the wiring harness to the passenger's side strut tower.



Wiring Harness Screw (Passenger's Side)

- 2 Unhook the plastic wiring harness holder from the passenger's side strut tower stud.
- 3 Use a 15mm to remove the (4) nuts holding the strut tower bar. Remove strut tower bar.



Strut Tower Bar (Passenger's Side)

GT Models:

- Remove the engine oil fill cap. Use flat screw driver to pop off the (2) round plastic caps on the engine cover. Use a 10mm socket to remove the nut below each cover. Remove cover.
- 5 Unplug the MAF connector by extending the red locking tab and squeezing the connector. Disconnect the harness from the front side of the airbox.



Engine Cover Cap

- Remove the (1) small hose from the air inlet tube by squeezing the retaining clip and pulling back on the hose.
- 7 Disconnect the medium-size PCV hose by rotating the locking clip up and pulling back on the hose.
- 8 Use pliars to compress the clamp holding the large hose to the inlet tube. Disconnect the hose.
- 9 Using a 7mm nut driver, loosen the inlet connection to the throttle body.
- Use a 10mm to remove the screw holding the air box to the body.
- 11) Remove airbox and inlet tube assembly.
- Remove the plastic clip holding the air tube to the driver's side strut tower.
- Locate the tab holding the air tube to the fuel line. Squeeze the tab to disconnect.
- Locate the nut holding the air tube to the firewall, behind the engine on the driver's side. Using a 10mm socket, swivel, and extensions, remove the nut. Pull the air tube out of the driver's side firewall by pulling gently outwards.
- 15 Insert the supplied grommet found in the air inlet bag into the hole in the firewall.



Disconnect Air Inlet Hoses



Airbox Screw



Firewall Nut

Bullitt Models:

- Disconnect the (2) PCV hoses from the air intake elbow.
- 17 Unplug the MAF connector by extending the red locking tab and squeezing the connector. Disconnect the harness from the front side of the air inlet tube.



Disconnect Hoses/Plugs

Using a 10mm remove the (4) bolts securing the rubber hood seal to the factory air box.



Remove Rubber Hood Seal


- Using a 10mm remove the (1) bolt securing the air box to inner fender.
- Using a 7mm nut driver, loosen the inlet connection to the throttle body.
- (21) Remove airbox and inlet tube assembly.



Air Box Bolt

FASCIA REMOVAL

- 1 Raise the vehicle just enough to access the undercladding hardware. Secure with jack stands.
- 2 Use a flat screw driver to remove the (8) plastic clips that secure the radiator cover. Remove cover.
- Use a flat screw driver to remove the (6) undercladding plastic push-clips. (3 per side). And also remove the (2) push pins in the corners near the front tires.
- 4 Use a 7mm to remove the 18 screws holding the undercladding. Remove the undercladding.
- 5 Disconnect the fog light and turn signal connectors, (1) connector per side.
- 6 Use a flat screw driver to remove the plastic push-clips holding the wheel liner to the fascia in front of the tires. (3 per side).
- Pull back the wheel liner to gain access to the fascia-to-fender mounting just in front of the tires. Use a 10mm to remove the (2) nuts. Push down on the plastic push clip to remove the plastic stud housing.

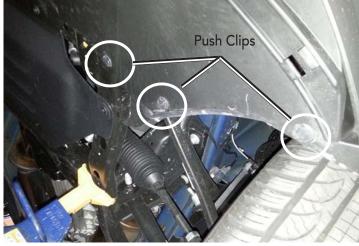

Driver's Side Push Clips



Remove Undercladding



Fender Nuts

Push down on the plastic push clip to remove the plastic stud housing.



Plastic Stud Housing Removed

- 9 Use an 8mm to remove the (6) screws at the top of the fascia.
- There are (2) screws (1 on each side) under the weather seal near the headlight. Pull back the weather seal and use a 5.5mm to remove the screws.
- 11) Remove the fascia.



Top Fascia Screws

If not equipped with active shutters:

Remove the radiator air baffle by pushing down on the (6) clips that hold it to the plastic fascia mounting structure.



Remove Air Baffle

If equipped with active shutters:

- Remove the active shutters from the vehicle by removing the (4) 10mm bolts and (2) push pins.
- In order to release it from the vehicle remove the (2) 5.5mm bolt from the backside.



Remove Active Shutters

Track Pack Models:

Use a 13mm to remove the (2) nuts holding the bumper brace to the back side of the bumper (each side).



Bumper Brace Nuts

- Use a 13mm to remove the (2) bolts holding the bumper brace to the radiator core support (each side).
- 17 Remove each side bumper brace.



Radiator Core Support Bolts

Fascia Removal

All Models:

- 2018 Models: Disconnect the ambient air temperature sensor and its wiring harness from the front bumper.
- Remove the driver's and passenger's side plastic radiator shrouds by removing the (2) push pins and pulling the shrouds out the front of the vehicle.

 2018 Models will be connected by a panel along the bottom.
- 18 If equipped, remove condenser end tank covers.



Passenger's Radiator Shroud

COOLING SYSTEM

- 1 Drain the cooling system by loosening the petcock near the bottom passenger's side of the radiator. Save the coolant as it will be reused to refill the system.
- 2 Use pliars to compress the clamp holding the radiator hose to the thermostat housing neck. Disconnect the hose from the housing.
- 3 Use a 8mm to remove the (2) bolts attaching the thermostat housing neck to the housing body. Remove the lower housing neck.
- If the thermostat comes out of the housing, put it back in place.
- 5 Using the factory hardware, install the new supplied thermostat housing neck.
- Reinstall the coolant hose onto the new thermostat housing neck.
- 7 Use pliars to disconnect the (3) hoses attached to the coolant reservoir.
- 8 Use a 10mm to remove the (2) screws holding the coolant reservoir to the fan shroud. Save these screws as they will be used in a later step. Remove the coolant reservoir.



Thermostat Housing



New Thermostat Housing Neck Installed



Factory Coolant Reservoir

PROCHARGER BRACKET AND HEAD UNIT

Main Bracket

- 1 Use a 15mm to compress the factory tensioner and remove the factory belt. It will not be reused.
- Remove the (2) timing cover bolts and the alternator nut labeled in the image at right. The alternator nut can be removed by using a 15mm socket, the remaining (2) bolts use a 13mm socket (the lower right bolt will have a plastic cap that needs to be pulled off before accessing the bolt).



Remove Factory Hardware (Driver's Side)

3 Use a 13mm to remove the uppermost timing cover bolt on the driver's side, behind the coolant tube.



Uppermost Timing Cover Bolt



Tech Tip: The upper coolant tube may need to be bent slightly to remove the upper bolt.

- The large flange on the timing cover will need to be cut for belt clearance. Use a marker to mark a notch on the flange as shown.
- 5 Using a die grinder or other cutting tool, cut a notch in the flange.



Mark Timing Cover for Notch




Notch With a Cutting Tool (Die Grinder Shown)



Timing Cover Notched


ProCharger Bracket and Head Unit

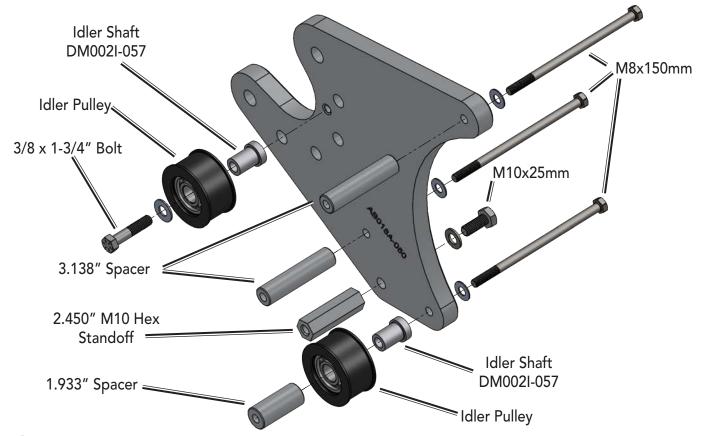

- 6 Install the hex standoff onto the alternator stud.
- 7 Install the main bracket as shown. Leave hardware loose until all hardware has been installed.
- \checkmark

Tech Tip: Installation is most easily done by starting the M10x25mm bolt into the hex standoff to hold the bracket in place. Then insert the (2) 3.138" spacers between the bracket and the timing cover. Insert the M8x150mm bolts through the bracket and spacers and into the timing cover. Finally, insert the idler shaft with the smaller I.D. into the 2.5" idler pulley. Align the pulley with its mounting hole on the bracket. Place the 2.296" spacer between the spacer and engine. Both idler pulleys must be installed with the snap ring facing the bracket. Secure with the last M8x150mm bolt.


- 8 Install the oil drain line onto the supercharger. Verify the plug at the end of the drain line is tight.
- 9 Remove the oil fill reminder tag from the head unit. Fill the supercharger with (1) 6 ounce bottle of the supplied blower oil. Route the oil drain line to the front of the vehicle under the driver's side headlight, and secure it with zip ties.
- Mount the ProCharger onto the main bracket using the provided (4) 5/16-18 x 7/8" and (2) 3/8-16 x 7/8" SHCS's. Tighten the fasteners.
- Insert the idler shaft into the remaining 2.5" idler pulley. Install the pulley onto the main bracket using the 3/8 x 1-3/4" bolt. Tighten with a 9/16 wrench.

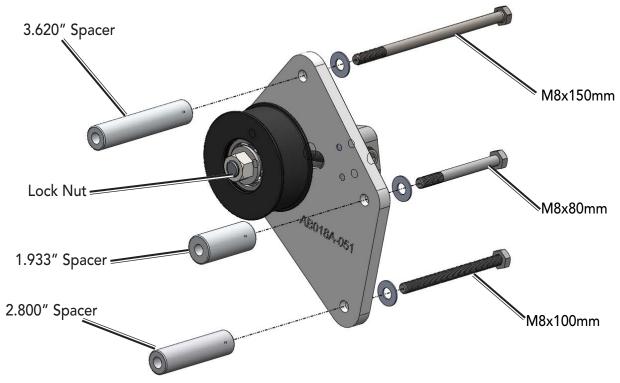


Tensioner Bracket Assembly

Tensioner Bracket


- Unplug throttle body connector. Use an 8mm to remove the (4) throttle body screws and remove throttle body.
- Use a 10mm to remove the timing cover bolt shown to the right.
- Use a 3/4 wrech to loosen the tensioner lock nut. Mount the tensioner bracket using the timing cover mounting points shown to the right. Tighten evenly with a 13mm.
- Using a 1/4 Allen socket, turn the tensioning screw counterclockwise to drive the ATI tensioner pulley towards the water pump pulley.

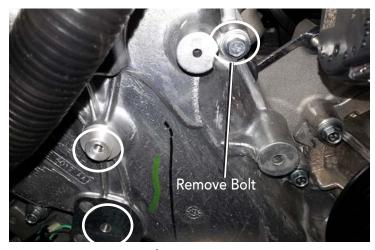



Tensioner Bracket Mounting Locations (Passenger's Side)

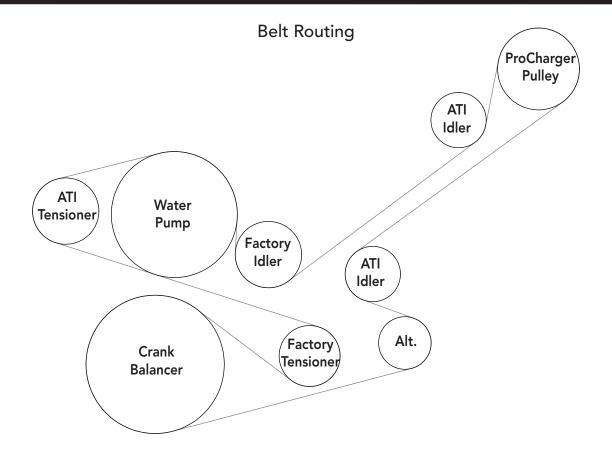

- Using a 15mm to compress the factory tensioner, install the supplied supercharger belt. Refer to the belt schematic for proper routing.
- Using a 1/4 Allen socket, turn the tensioning screw clockwise until the belt is properly tensioned.
- Use a 3/4 wrench to tighten the tensioner lock nut. Reinstall the throttle body.

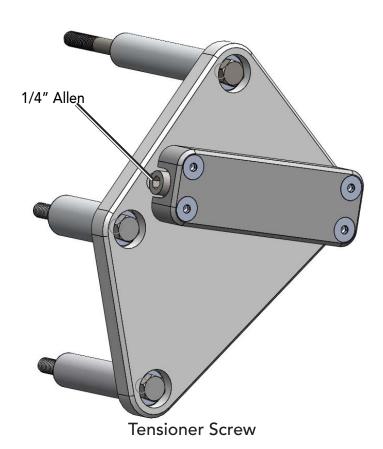

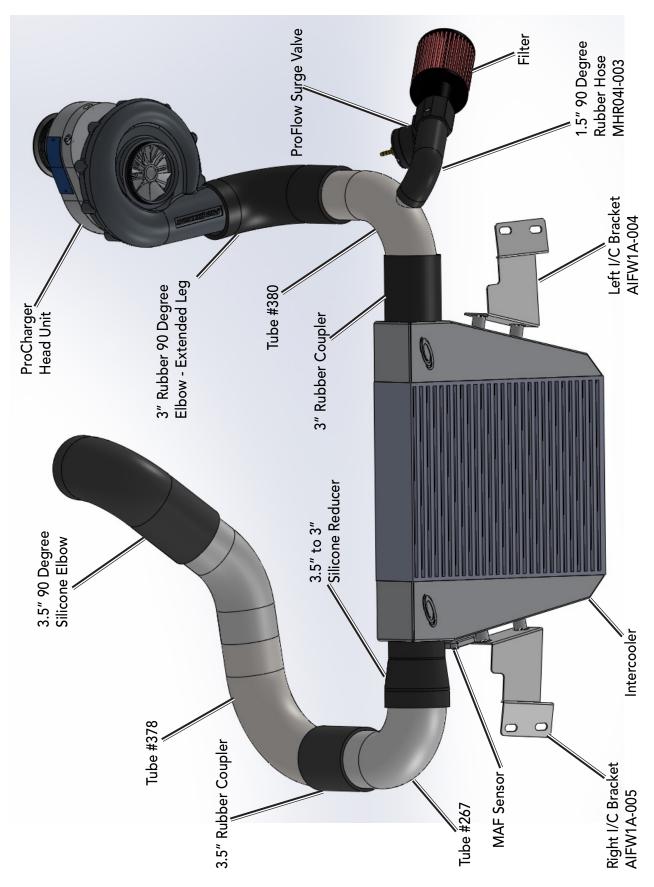

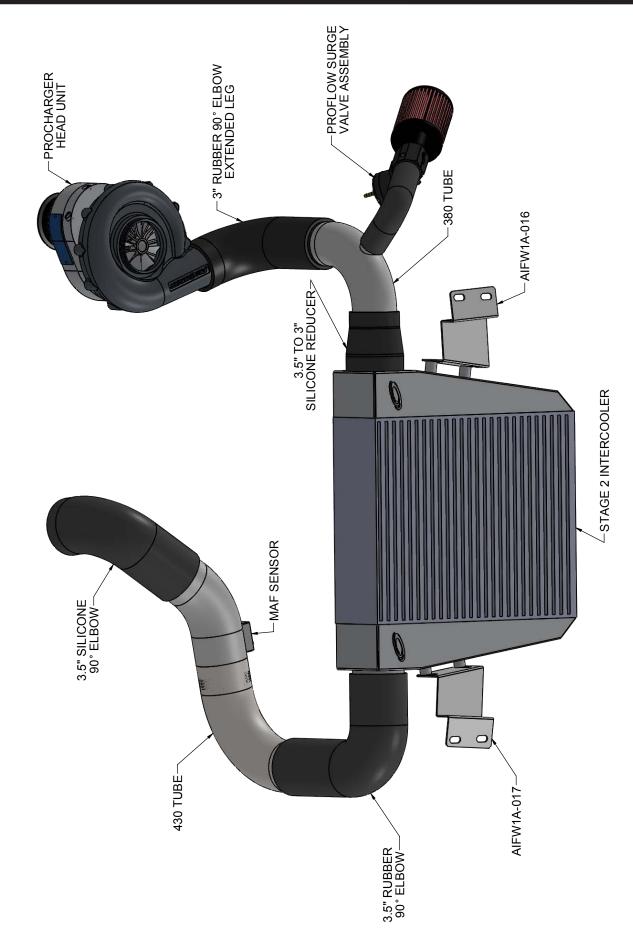

- 1 Use a 10mm to remove the (2) screws holding the factory upper radiator brackets (each side). Remove the brackets
- Install the supplied rubber isolators over the top radiator mounting posts. Push the isolator down as far as it can go.
- Install the supplied radiator brackets using the factory hardware. Pull the radiator as far forward as possible and tighten the bolts.
- 4 Use a 8mm to remove the screw attaching the horns to the body.
- 5 Remove the panel nut and install it in the hole a few inches below at the bottom of the frame.
- Use a 10mm to loosen the (2) nuts on each horn. Mount the horns to the panel nut using the factory bolt. The body of the horns should be faced toward the center of the car. Rotate the horns so they are pointing downward. Tighten the 10mm nuts.



Radiator Bracket Installed



Horn Nut Relocated



Horns Relocated

Intercooler & Tubing

H.O. Intercooler Only:

7 Insert the MAF sensor into the intercooler plenum on the passenger's side. The mounting holes are offset so the sensor can only be installed one direction. Secure with the supplied M4 screws using a 7mm.



H.O Intercooler Only: MAF Sensor Installed

8 Use the supplied MAF extension harness to connect the factory MAF harness to the MAF sensor.

Continue To Page: 20

Stage 2 Intercooler Only:

- Disconnect the wiring harness retainers holding the main wiring harness behind the front bumper. Set the harness on top of the bumper to provide clearance for the intercooler.
- 10) Use a T15 torx to remove the (2) screws retaining the factory MAF sensor to the factory inlet tube.



Wiring Harness Retainers (Stage 2 ONLY)

- 11) Insert the MAF sensor into tube #430. The mounting holes are offset so the sensor can only be installed in one direction. Secure with the supplied M4 screws using a 7mm socket.
- If optioned with a race valve: Install the



Stage 2 Intercooler Only: MAF Installed Into Tube #430

13) If optioned with a race valve: Mount the race valve to the plenum on the intercooler using the supplied #10 screws and o-ring. Orient the pushlock fitting so it is towards the back side of the intercooler.


90° pushlock fitting onto the valve.



Race Valve Mounted (Optional)

Intercooler & Tubing

- Slide the intercooler up between the bumper and the condenser. The MAF should be on the passenger's side for H.O intercooler only. Use a jack stand to support the intercooler until the brackets are attached.
- 15) The intercooler brackets slide over the end of the bumper to frame bolts on the back side of the bumper. Thread the supplied M8 nuts with washers onto the bumper bolts with a 13mm. (Both sides)

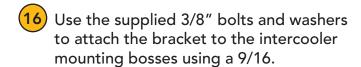




Tech Tip: Leave the intercooler bracket hardware loose until all hardware has been installed and the intercooler has been adjusted. Adjust the intercooler up and as far forward as possible before tightening.



Tech Tip: Leave tubing connections loose to allow for adjustment.

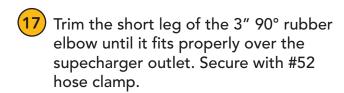



Tech Tip: For race valve installation, trim 1-1/4" from the short leg and 1-3/4" from the long leg of the 3" extended 90° rubber elbow. Also unclip the wiring harness from the frame rail.



Intercooler Mounted (H.O. Shown)



Driver's Side Intercooler Bracket



Blower Discharge Tube Installed

H.O. Intercooler Option Only Stage 2 Intercooler Proceed to Step 23

- 18 Install tube #380 into the open end of the extended leg 90° rubber elbow. The long leg of the rubber coupler may need to be trimmed for proper fitment. Secure with a #52 hose clamp.
- 19 For Race Valve option, wait to install tube #444.
- Do not trim long leg of the extended leg 90° rubber elbow.
- Connect the tube #380 to the intercooler using the 3" rubber coupler. Secure connections with #52 hose clamps.
- Insert the 3.5" to 3" silicone reducer onto the passenger's side intercooler outlet.
- Insert the short end of tube #267 into the silicone reducer. Secure with #56 and #52 hose clamps.
- Slide the 3.5" rubber coupler over the open end of tube #267. Secure with #56 hose clamp.
- 25) Insert the 90° leg of tube #378 into the coupler. Secure with a #56 hose clamp.



Surge Tube #380 Installed



Tube #267 Installed



Tube #378 Installed

Stage 2 Intercooler Option Only H.O. Intercooler Proceed to Step 32

- Install tube #380 (tube #268 for race valve) into the open end of the extended leg 90° rubber elbow. The long leg of the rubber coupler may need to be trimmed for proper fitment. Secure with a #52 hose clamp.
- Connect the tube #380 (tube #268 for race valve) to the intercooler using the 3.5" to 3" silicone reducer. Secure connections with a #52 hose clamp and a #56 hose clamp.
- Insert the 3.5" 90° rubber elbow onto the passenger's side intercooler outlet. Secure with a #56 hose clamp.
- Pull the radiator fan connector out of the fan shroud. Move the connector and harness down and zip tie it to the A/C line so it is out of the way of the intercooler tubing.
- 30 Insert the 90° leg of tube #430 into the open end of the 3.5″ 90° rubber elbow. Secure with a #56 hose clamp. The A/C hard line may need to be bent slightly back towards the radiator to provide enough clearance for tube #430.



Surge Tube #380 Installed




3.5" 90° Rubber Elbow Installed



Tube #378 Installed

- Use a flat screwdriver to unclip the driver's side wiring harness retainer. Slide the retainer down to line up with the hole on the top of the bumper.
- Use a flat screwdriver to unclip the center wiring harness retainer. Remove the retainer. It will not be reused.

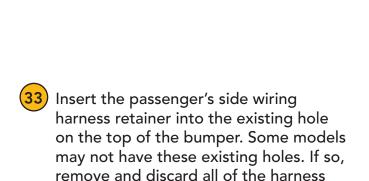



Unclip the Driver's Side Harness Retainer



Wiring Harness Relocated

All Options:

clips.

Using the 3.5" 90° silicone elbow complete the connection to the throttle body as shown. Secure with 3.75" T-bolt clamps.



Note: Bullitt Models: Use the 4"-3.5" 90° silicone elbow to complete the connection to the throttle body. Trim the 4" side in order to fit properly.

Use the supplied MAF extension harness to connect the factory MAF harness to the MAF sensor.



Throttle Body Elbow Installed


SURGE SYSTEM


- 1 Unwrap the foam covering the factory vacuum tree.
- The port on the lower passenger's side has a line that previously ran to the factory air inlet tube. Remove this line from the vacuum tree.



Factory Vacuum Tree

- 3 Assemble the vacuum manifold using the provided barb fittings and plugs as shown.
- Tech Tip: If installing a boost gauge, replace one of the 1/8" plugs with the additional provided barb fitting. Route a vacuum line from the barb to the boost gauge.

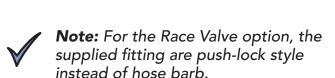

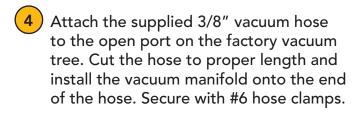



Vacuum Manifold Assembled



Vacuum Manifold Installed

Proflow Surge Valve

For H.O. Intercooler Race Valve Option Proceed to Next Page. Stage 2 Intercooler Race Valve Proceed to Step: 10

- 5 Install the 1.5" 90° rubber hose over the bung on tube #380. Secure with a #24 hose clamp.
- Insert the ProFlow surge valve into the open end of the 1.5" hose. The valve can be installed in either direction. Secure with a #24 hose clamp.



Tech Tip: Ensure the surge valve's actuator linkage and vacuum barb are unobstructed when fascia is reinstalled.

- 7 Install the remaining 1.5" 90° rubber hose on the oposing side of the ProFlow surge valve. Secure with a #24 hose clamp.
- 8 Install the 1.5" 3" long tube into the open end of the 90° rubber hose. Slide the filter over the open end of the tube. Secure with a #24 hose clamp.
- 9 Attach the supplied 3/16" vacuum hose to the 3/16" barb fitting on the vacuum manifold, then route and attach to the surge valve vacuum port. Ensure the surge valve line is free of any sharp bends and is clear of any moving parts.



Note: If the bumper is difficult to install, it may be necessary to swap the location of the surgave valve and 3" long tube.

Race Valve Option Stage 2 Only:


Route the supplied 1/4" nylon hose from the push-lock fitting on the vacuum manifold to the fitting on the race valve.



ProFlow Surge Valve Installed

Race Valve Option H.O. Intercooler Only:

- 11 Install the supplied 90° pushlock fitting onto the race valve.
- Install the supplied o-ring into the groove on the race valve tube and install the race valve onto the tube using the supplied #10 SHCSs. On 2018 Models, orient the pushlock fitting so it will be towards the front of the car when installed.
- Unplug the air bag sensor. Remove the air bag sensor by removing the 10mm nut.
- Insert the provided M6 bolt through the hole on the body below the headlight.
- Place the airbag sensor over the bolt and mark where the nub hits the body. Drill a 5/16 hole through the body. Mount the sensor using the provided M6 nut.
- 16 Install the race valve tube assembly onto the vehicle and secure with the provided #52 hose clamps.

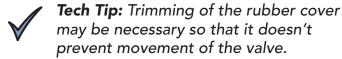

- Route the supplied 1/4" nylon hose from the push-lock fitting on the vacuum manifold to the fitting on the race valve.
 - WARNING: Installing a race valve requires relocating the airbag sensor. Modifying or moving the airbag sensor could affect its operation. This should only be done in race-only applications for off-road use.



Airbag Sensor Relocated



Race Valve Tube Installed



Race Valve Tube Installed

AIR INLET AND PCV SYSTEM

- 1 Locate the plastic inlet tube. Install the 90° brass fitting into the tube as shown.
- 2 Insert the supplied 4" section of 5/8 rubber hose onto the end of the brass fitting.
- 3 Install the supplied 5/8 plastic "T" fitting onto the other end of the 4" piece of hose. Secure with the provided hose clamps.
- Install the 3" long 4" rubber coupler onto the plastic inlet tube. Secure with a #64 hose clamp.
- 5 Install the inlet tube onto the ProCharger inlet. Secure with a #60 hose clamp.
- 6 Install the inlet tube onto the ProCharger inlet. Secure with a #60 hose clamp.
- 7 Install tube #288 into the open end of the 4" rubber coupler as shown in the picture. Secure with a #64 hose clamp.
- 8 Install the air filter onto tube #288 using a #60 hose clamp.



Tech Tip: It may be necessary to test fit the fascia on the vehicle to verify filter clearance.



Inlet Tube Assembled



Inlet Elbow Installed



Air Filter Installed

Air Inlet and PCV System

- 9 Disconnect the line going to the port behind the throttle body on the passenger's side. Install the supplied 5/8" vacuum cap over the port and secure with a #10 hose clamp.
- Disconnect the factory plastic lines that go to each side valve cover vent.



5/8" Vacuum Cap

Use a razor blade to cut the plastic hose at the connection fitting of the factory PCV lines that attach to each side valve cover.



Factory PCV Connector (Driver's Side)

The supplied 5/8 hose can be attached directly to the factory valve cover fittings. Secure with a #10 hose clamp.



Factory PCV Connector (Passenger's Side)


- Route the passenger's side 5/8 hose in front of the radiator and across the front of the vehicle to one of the open ports on the air inlet tube tee fitting.
- Route the driver's side hose to the remaining port on the tee fitting.



Passenger's Side PCV Hose Routing

FINISHING UP

- 1 Locate the supplied coolant reservoir tank. Using thread sealer, install the (2) 3/8" brass barb fittings into the 1/4" NPT bungs.
- 2 Using thread sealer, install the 3/4"
 90° brass barb fitting into the 1/2"
 NPT on the bottom of the tank. The
 fitting should be oriented so that it is
 pointing towards the throttle body when
 intstalled.
- Mount the coolant reservoir using the factory mounting location on the fan shroud, using the factory hardware. Connect the coolant lines to the barbs on the new tank and secure with the factory hose clamps.

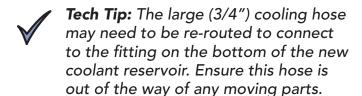

- Refill the cooling system. The coolant level should be approximately 2" below the cap.
- 5 Install the supplied coolant reservoir cap.
- 6 Test fit and trim the top radiator cover to clear the radiator post on both sides.



Coolant Tank Bung Orientation



New Coolant Reservoir Mounted



Radiator Cover Trimmed

- Inspect belts and pulleys for clearance from all wires and hoses. Adjust and secure any hoses or wires that may be caught or abraded by the belts or pulleys. Verify the belt is properly tensioned. Any locations where steel tubes could abrade on the chassis should be cushioned with the supplied selfadhesive rubber strips.
- 8 Using the factory hardware, re-install the front bumper cover. Plug the fog light and turning signal harnesses back into the proper locations on the front bumper cover.

- 9 Remount the plastic undercladding.
- Re-install the plastic radiator cover using the factory hardware.
- Re-install the engine cover by aligning the cover over the engine and pushing downward until all four corners of the cover snap into place.



CONGRATULATIONS! YOU HAVE COMPLETED THE INSTALLATION OF YOUR NEW PROCHARGER SUPERCHARGER SYSTEM. READ THE FOLLOWING PAGES CAREFULLY FOR OPERATION AND MAINTENANCE INSTRUCTIONS, AS WELL AS WARRANTY INFORMATION.

OPERATION AND MAINTENANCE

Cold Starting

Never race your engine and ProCharger supercharger when your engine is cold. Allow the water temperature to climb into operating range for several minutes before driving above 2,500 rpm, to ensure adequate oil lubrication.

Fuel Quality

With a properly installed intercooled ProCharger supercharger system, detonation should not occur. For the best performance and reliability, use premium grade fuel (91 octane or higher). Listen for signs of detonation after refueling, and after replacement or modification of any fuel system component(s). If detonation occurs, reduce the throttle and locate the source.

Ignition System Maintenance

If your spark plugs are more than a year old or have more than 10,000 miles logged, you should consider changing them before driving your vehicle under load. Spark plug wires should be changed if visibly damaged or when resistance exceeds factory specifications.

Air Filter Maintenance

Your air filters should be cleaned periodically, potentially as often as every 10,000 miles or 6 months, even though a service interval of 50,000 - 100,000 miles is quoted by the manufacturer under normal driving conditions. A clogged air filter will result in decreased boost levels and vehicle performance. Be sure to reoil the cleaned filter before re-installing. Always operate your vehicle with an air filter, failure to do so may result in damage to your ProCharger supercharger and/or personal injury!

Belt Replacement

The serpentine belt, which turns your ProCharger supercharger, will stretch after initial run-in, and should be re-tightened after the first hundred miles. Tighten the belt sufficiently to avoid slippage, but do not overtighten. Overtightening the belt could cause damage to the ProCharger supercharger's precision bearings. When reinstalling the belt, use the belt routing diagram in this manual. If you reuse a thrown belt and find that it needs frequent re-tightening, the belt is damaged and should be replaced. Gates Micro-V belts can be purchased from ATI or from your local parts store.

ProCharger Oil Change Intervals

The first oil change should be performed at 500 miles and at 6,000 mile intervals thereafter. Clean the drain plug after every oil change. Drain the oil by removing the drain plug. Clean off the drain plug before re-installing.

ProCharger Oil Level

The ProCharger supercharger's oil level must be checked periodically to ensure the proper lubrication. The dipstick can be loosened using a flat blade screwdriver or a coin. When installed, the oil level should remain between the minimum (MIN) and maximum (MAX) indicators at all times.




Warning: Filling the ProCharger higher than the maximum level on the dipstick can lead to bearing and seal damage. The supercharger is a sealed unit and should not normally require the addition of oil between service intervals. If excessive usage is noted, the unit should be sent to ATI for inspection and repair. The dipstick fitting should be firmly tightened after changing or checking the oil level.


General

When removing the dipstick, be sure to retain the nylon washer. A spare nylon washer and o-ring is included. Use only the ATI supplied nylon washer and o-ring when servicing the oil dipstick and drain plug. A discoloration of the oil and residue on the drain plug may occur during the initial oil changes. This is normal and will gradually decrease. For the proper positioning of the ProCharger supercharger, the serial tag should be pointing upwards. Installing the ProCharger supercharger in another position will cause inadequate oiling and supercharger failure. If you have any questions about the maintenance of your supercharger, contact ATI.



Warning: The supercharger contains no oil from the factory. The unit must be filled prior to use. Use only ATI supplied oil in your ProCharger. The ATI oil has been specially formulated for the bearings in the ProCharger and use of oil other than that supplied by ATI will void your warranty.

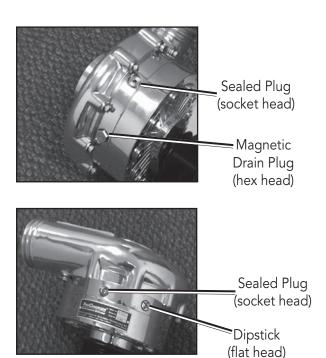

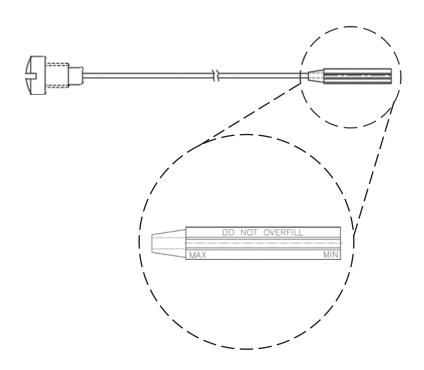

LIMITED WARRANTY

Accessible Technologies, Inc. (ATI) provides a limited twelve (12) month warranty on the ProCharger supercharger against defects in materials and workmanship unless otherwise specified. This limited warranty starts on the date of original purchase from your local dealer, or date of shipment from the factory. This limited warranty coverage is extended only to the original owner and excludes hoses, sleeves, and electronic components manufactured by other companies. IF THE SUPERCHARGER'S DRIVE RATIO IS ALTERED IN ANY WAY FROM THE FACTORY SETTING, WARRANTY COVERAGE IS VOID. USE OF ANY PULLEY NOT MANUFACTURED OR SUPPLIED BY ATI VOIDS ALL WARRANTY COVERAGE. ATI's warranty obligations are limited to the terms below:

ATI agrees to honor a warranty claim at its sole discretion and only after inspection at the ATI factory. No warranty will be honored if any part of the product is found to have been improperly installed, tampered with, mishandled, or misused in any way. Disassembly of the ProCharger supercharger or removal of the ProCharger supercharger's serial plate voids all warranties. Claims for freight damages should be directed to the freight company.

If ATI's limited warranty applies, your product will be repaired or replaced at ATI's discretion and shipped back. If the limited warranty does not apply, ATI will advise you of the specific reason, cost of the repair, and delivery time. After advising you of this information we will, at your option, either proceed with repairs or return your product to you in the state in which it was received. In either case the product will be shipped to you, insured at replacement value. Therefore, you will pay the return shipping and insurance charges if ATI's limited warranty does not apply to your product.

THE WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHERS, ORAL OR WRITTEN, EXPRESS OR IMPLIED. THE DURATION OF ANY AND ALL WARRANTIES ON THE PRODUCTS DISCUSSED ARE LIMITED TO THE PERIOD IDENTIFIED ABOVE. ATI IS NOT RESPONSIBLE IN ANY EVENT FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES. No ATI dealer, agent, or employee is authorized to make any modification, extension, or addition to this warranty.

To obtain service under this warranty you must do the following during the warranty period:

Phone ATI (913-338-2886) and provide us with the following information:

- ProCharger supercharger serial number.
- Vehicle year, make, model, engine modifications, and other modifications.
- Description of perceived issue.

If a solution to your issue can not be found after the above phone consultation, you will be assigned a return authorization number (RMA). You must then properly package and ship your product, at your expense, to the ATI factory. The product should be carefully packaged in a rugged box.

Include the following information inside the box with your product:

- Copy of your original invoice or receipt.
- Name, address, and daytime telephone number.
- Return authorization number (RMA).
- Vehicle year, make, model, engine modifications, and other modifications.
- Description of perceived issue.

Clearly mark the warranty claim number on the top and one side of the box in characters at least 2" tall. Properly package the product and ship it, prepaid and insured for the retail value of the component(s) being returned, to the following address:

Accessible Technologies, 14801 West 114th Terrace, Lenexa, Kansas 66215

PROCHARGER EXTENDED COVERAGE

The ProCharger Extended Coverage Program extends the ProCharger warranty coverage for your supercharger an additional twenty-four (24) months, for a total of thirty-six (36) months or three years of coverage. This extended coverage applies to parts for the ProCharger supercharger head unit only and does not include other system components. With your extended coverage registration, you will receive two (2) additional boxes of ProCharger Supercharger oil.

Under the extended coverage program, Accessible Technologies, Inc. (ATI) will repair or replace any component within the supercharger head unit which is found to be defective. Only the supercharger head unit itself is included in the extended coverage.

Service under the extended coverage program is obtained through the same process as described in the Limited Warranty.

Race kits are not eligible for the ProCharger Extended Coverage Plan.

To qualify for the ProCharger Extended Coverage:

- Only the original owner of the ProCharger supercharger is eligible.
- Completion of the Extended Coverage
 Registration Form is required, along with
 a \$99 registration fee. This form must be
 completed in its entirety, and must be
 submitted along with payment within 30 days
 from the date of original purchase from your
 local dealer or date of shipment from the
 factory.

- Participants must have a ProCharger P-1SC, P-1SC-1, P-1X, C1, or C2 supercharger head unit using the maximum warranted boost level. All terms and conditions within "The Limited Warranty" apply. Acts resulting in disqualification include but are not limited to the following:
 - Disassembly or modification of the ProCharger supercharger.
 - Removal or attempted removal of the ProCharger drive pulley(s).
 - Removal or attempted removal of the ProCharger supercharger serial number plate.
 - Removal or attempted removal of the compressor housing or transmission case.
- Participants agree to properly maintain the ProCharger supercharger and provide proof of compliance with the following recommended maintenance:
 - Change the ProCharger supercharger oil after the initial break-in period of 500 miles (automotive) or 15 hours (marine).
 - Change the ProCharger supercharger oil every 6,000 miles after the initial breakin period.
 - Use only the specified amount of ProCharger Supercharger oil in the ProCharger supercharger.
 - Inspect and clean the magnetic drain plug at every ProCharger supercharger oil change.
 - Check the ProCharger supercharger oil level frequently.



cut along the dotted line

ProCharger Extended Coverage Program Registration FormReturn this completed form and a \$99 check within 30 days of original purchase.

Name:	Date of Purchase:	
Address:	Purchased From:	
City:	ProCharger Serial #:	
State: Zip:	Vehicle Year:	
Daytime phone:	Vehicle Make:	
Evening phone:	Vehicle Model:	
E-mail:	Please rank in order of importance starting with	
Age □ 18 - 24 □ 25 - 34 □ 35 - 44	1 being most important.	
□ 45 - 54 □ 55 and up Income □ \$15,000 - \$29,000 □ \$30,000 - \$44,000	Which information sources most influenced your decision to purchase a ProCharger system?	
□\$45,000 - \$69,000 □\$70,000 and up	Magazine advertising	
What magazines do you read?	Dealer recommendation	
	ProCharger BrochuresWitnessed performance on a car	
☐ Car & Driver☐ Car Craft	Test drive	
☐ Chevy High Performance	Magazine editorials	
☐ Four Wheel and Off Road	Friends	
☐ Hot Rod	Conversations with ATI technicians Web Site (please specify)	
☐ Motor Trend☐ Muscle Mustangs and Fast Fords	Other (please specify)	
☐ GM High-Tech Performance		
□ 5.0 Mustang	What most influenced your decision to purchase a	
☐ Super Street	ProCharger system?	
☐ Mustang Monthly☐ Truck Trends	Reliability	
☐ Popular Hot Rodding	Standard warranty	
☐ Road & Track	Extended coverage warranty	
☐ Super Chevy	Performance	
☐ Truckin′ ☐ Street Truck	Quiet operation Removability (ability to return car to stock)	
a street nuck	Cost	
	Ease of Installation	
Who installed your ProCharger system? □ Self	□ Dealer □ Other	
Have you own a forced induction system previously? If yes:	□Yes □No	
Supercharger: Brand(s)	Vehicle(s)	
Turbocharger: Brand(s)	Vehicle(s)	
I have read and understand the policy for the Pronot and will not modify my ProCharger supercharacteristic extended coverage program. I have read and any my check for \$99, payable to ATI, for enrolling my indicated above) in the extended coverage program beyond the standard limited warranty period of the standard limited warranty period of the process of the proce	ger in any way during my participation in the swered all questions on this form. I have enclosed ProCharger supercharger (serial number ram for an additional twenty-four (24) months	
	Date	
Signature		

338-2886 8:30 AM - 5:30 PM CST, Monday - Friday.







Accessible Technologies, Inc. 14801 W. 114th Terrace Lenexa, KS 66215 Phone: 913.338.2886

Fax: 913.338.2879 techserv@procharger.com

Accessible Technologies, Inc.
©2021 ATI, All Rights Reserved
Part Number PMFW1A-008 Rev. H

